

型号：CX-6651说明书
规格：148X210MM
印刷颜色：黑色
材质：70克书面纸
修改时间：2024.10.30

D.MIXING GUIDE

SPEED	DESCRIPTION
1	This is a good starting speed for mixing dry foods.
2	Best speed to start mixing liquid ingredients, salad dressings.
3	For mixing cakes, cookies and breads.
4	For creaming butter and sugar, beating uncooked candy, desserts, etc.
5	For beating eggs, cooking icings, whipping potatoes. Whipping cream. Etc.

PREPARATION GUIDELINE CHART

Dough Hooks	Capacity	Duration
Yeast dough	Max.750g flour+540g water	3 minutes
Beaters	Capacity	Duration
Thin sauces,creams and soups	Approx.750g	3 minutes
Mayonnaise	Max3.egg yolks	3minutes
Mash potatoes	Max.750g	5minutes
Whipping cream	Max.750g	3minutes
Whisking egg whites	Max.5 egg whites	5 minutes

- To prevent motor overheating does not work continuously longer then 3 minutes and obligatory stop mixer for less than 5 min, letting it cool to room temperature. Turbo: not more than 1 minute continuous use.
- Always unplug the unit from the power supply before cleaning.
- Wash beaters with warm water and then dry.
- Clean the body with a damp cloth and never wash or spill mixer with water.
- Caution:The hand mixer should not be immersed in water or other solutions for cleaning,Any other servicing should be performed by an authorized service representative.

E.CLEAN AND CARE


ENVIRONMENTALLY ACCEPTABLE DISPOSAL

	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.
---	--

Thank you very much for using our Hand Mixer.


HAND MIXER
Instruction Booklet

Model: CX-6651

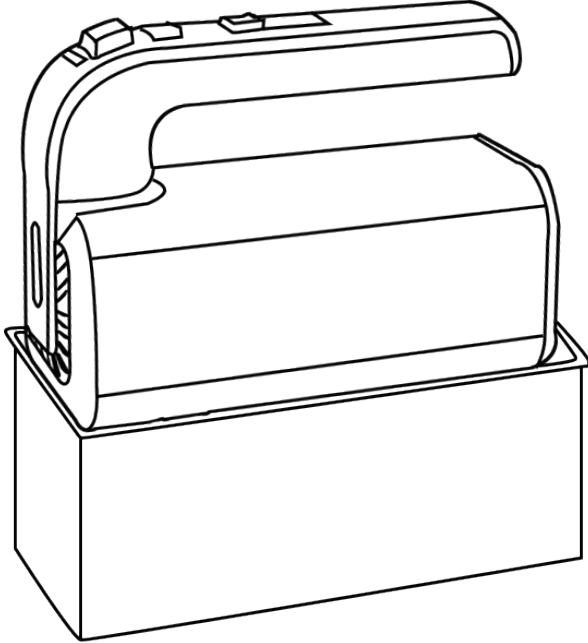

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS
B. PARTS IDENTIFICATION

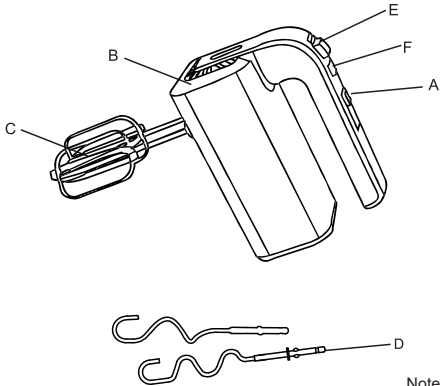

- (A)Speed Selector
- (B)Mixer Unit
- (C)Beaters
- (D)Dough Hooks
- (E)Eject
- (F)Turbo

Note: When inserting the dough hooks, remember that the rod with the large washer should be inserted to the right hand slot, and the other one into the left-hand slot. Reverse insertion will cause food to roll up and damage the machine.

C. USING YOUR MIXER

- Push the beaters into slots,slightly turning until locking into proper position.
- Immerse the beaters into products mixture.
- Plug the mixer into the wall socket.
- Slide the speed control switch to the desired speed.
- When the desired consistency is reached, slide the speed control switch to "O"position. Wait until the beaters stops and unplug mixer.
- Press beater release button and remove the beaters.
- To avoid splashing, place the beaters or dough hooks inside the batter before operating the appliance.
- Speed "0"is the "OFF"position.
- NOTE: Set the speed depending on type of food.Always start to work at low speed, and then gradually increase it.As the mixture during processing becomes thicker, increase power by switching to a higher speed.
- CAUTION: When inserting the dough hooks, remember that the rod with the largewasher should be inserted to the right hand slot, and the other one into the left-hand slot. Reverse insertion will cause food to roll up and damage the machine. This is to avoid the risk of the ingredients spilling over the rim of the utensils/receptacle.

A. IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed. including the following:
- 1.Read all instructions and save it for future reference.
 - 2.Make sure that your outlet voltage corresponds to the state on the rating label of the mixer.
 - 3.Do not leave mixer unattended while it is operating.
 - 4.Children are prohibited to using it without guardianship.
 - 5.Disconnect the power supply when no one is using it and before disassembling, cleaning.
 - 6.Avoid contacting with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to users or damage to the mixer.
 - 7.To protect against risk of electrical shock, do not put mixer, power cord and plug in water or other liquid.This may cause personal injury or damage to the product.
 - 8.Do not use mixer for other than intended use.
 9. Do not let cord hang over the edge of table or counter or touch hot surfaces, including the stove.
 - 10.This appliance is not intended for use by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
 - 11.Do not use outdoors.
 - 12.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - 13.Before replacing accessories or touching moving parts, turn off the power switch and disconnect the power supply.
 - 14.Close supervision is necessary when any appliance is used by or near children.Children should be supervised to ensure that they do not play with the appliance.
 - 15.Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet Never pull from the power cord.
 - 16.Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service website for information on examination repair, or adjustment.Customer service website is <https://zscanxin.en.alibaba.com>
 - 17.The use of attachment not recommended or sold by the manufacturer may cause fire, electric shock or injury.
 - 18.Remove beaters from mixer before washing.
 19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
 20. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 21. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
 22. The care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
 23. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.