


95\*67mm

### Razor Quick Instructions


#### Instructions for Use

- Press the switch button to turn on the electric shaver.
- Let the electric blade knife move on the skin against the direction of beard growth, and make a straight and rounded movement.
- Tear on the neck also can be shaved.
- After shaving, put on the protective cover to prevent damage to the knife net and prevent dust from accumulating in the knife net.




### Product introduction

Product introduction	1
Matters needing attention	2
usage method	3
Service and maintenance	4
common problem	5
Environmental protection information	6
Product specification	8



Please read this instruction carefully before using the product and keep it properly.

### Product introduction




### Matters needing attention

**Warning: Do not wash the hand-held part in water until the hand-held part is separated from the power cord.**

- Insert USB power cable is dry. Do not use wet hands to unplug the USB power cord plug to prevent electric shock.
- Please ensure that the rated voltage marked on the electric razor is consistent with the output voltage of the charging equipment used.
- Please do not use the electric razor for long time. Please do not use the electric razor for the type of fault and refer to the maintenance department of the company for maintenance of the razor.
- Persons (including children) with unpaired limbs, mental disorders and lack of relevant experience and knowledge must use under the supervision and guidance of the guardian. When unplugging the charging plug, do not pull the USB power cord directly.
- The product can only be charged with the matching USB power cable. Do not use any accessories not provided by the company with this product.
- Please check whether the knife net is damaged or deformed before use to avoid damaging it.
- Clean the electric shaver with clean water, but do not immerse it in water for a long time.
- Do not use any salt water, hot water or other liquids to clean the electric shaver. Do not use any other chemicals to clean the electric razor.
- When traveling, be sure to cover the electric shaver with the protective cover to protect the electric shaver net.
- Please do not charge the electric shaver for a long time.
- During use or charging, the electric shaver will generate slight heat, which is a normal phenomenon. Please feel free to use.
- It is recommended to charge, use and store the electric shaver at a temperature between 5°C and 30°C. When charging and placing, please put the electric shaver (there is no need to remove the protective cover) in a cool, dry place, away from sunlight or places with other heat sources.
- Do not directly touch the blade part (metal part) of the cutter head assembly by hand, otherwise it may cause injury.

### usage method



**Charge**


- Press the switch button to the stop state (Fig. 1).
- Insert the USB power cord to the electric shaver and keep it connected, and then insert the USB power cord plug into the charging device (Fig. 2).
- The LED digital display starts to blink, indicating that it is charging (Fig. 3).
- After about 1 hour of continuous charging, the digital display shows "100" and stops blinking, indicating that the charging is complete (Fig. 4).

**Endurance**

A fully charged electric shaver can provide up to 80 minutes of shaving time, but the shaving time may be less than expected due to the difference in shaving habits, cleaning habits and body types.

**Use this electric shaver can be used when connected to a 5V1A10C power supply.**

### usage method



**shaving**


- Press the switch button to start the electric shaver (Fig. 5).
- Hold the electric razor and move on the skin against the direction of beard growth and make a straight and circular movement (Fig. 6).
- The razor net will not move on the skin against the direction of beard growth (Fig. 7).
- After the product has been fully shaved (Fig. 7), long press the power switch button for 3 seconds to unlock.

**Shaving completed**

Press the power switch button again to close the electric shaver, and then cover the protective cover to prevent damage to the razor net (Fig. 8).

**When the knife net is damaged, please do not shave to avoid damaging your skin.**

### Service and maintenance



**Water washing and cleaning**

- Before use, use the USB power cord to separate the electric shaver from the power cord and press the switch button to the stop state (Fig. 9).
- Let the electric razor rest on the sink against the direction of beard growth and remove it (Fig. 10).
- It can be directly placed under the faucet to wash the knife net (Fig. 11). It is better to use water at room temperature (about 60°C water) to wash the razor net for 60 seconds.
- After washing, drain the excess water and place it to dry naturally.


**deposit**

It is recommended to dry the electric shaver fast and cover it with a protective cover to prevent the razor net from being damaged and dust accumulation inside.

**Replace the cutter head**

In order to obtain the best shaving effect, it is recommended to replace the razor net once a year. Please be sure to use the original electric razor net (P-707) razor net.

**The hand-held part can only be washed in water after the hand-held part is separated from the power cord.**



Please read this instruction carefully before using the product and keep it properly.

For more information, see the User Manual

1

2

3

4

5

### Instructions for quick use of razor

#### Cleaning and maintenance

- First, pull up the blade assembly and separate the body from the blade assembly.
- Use a brush to clean the broken hair from the blade assembly and the body shaft separately.
- You can directly move the knife net under the faucet, drain excess water after rinsing, and let it air-dry naturally.

### Service and maintenance

#### Deep Cleaning

- Pull up and remove the blade assembly (Figure 12).
- Use a cleaning brush to clean the shaver storage compartment and blade assembly (Figure 13).
- After cleaning the shaver, cover the shaver head and store it in a dry environment (Figure 15).

#### Maintenance

- It is recommended to clean the blade mesh every two months, and then use lubricating oil to drop into the blade mesh and blade head assembly for lubrication and maintenance (Figure 14).
- Regular cleaning of electric shavers can ensure better shaving results.

**⚠️ Do not use a towel or paper towel to wipe the razor net of the electric shaver, as this may damage the razor net.**

### Common problem

Common problem	Possible causes:	Terms of settlement
<b>Poor shaving effect</b>	The cutter net is damaged or worn Electric shaver net dirty The battery has been drained	Buy electric shaver FK-707, and replace the razor net Thoroughly clean the electric razor net Connect the power supply for charging
<b>Power on does not work</b>	Switch failure	Return to after-sales service
<b>Charging display lamp does not light up</b>	Charging indicator lamp or circuit fault	Return to after-sales service
<b>Skin allergy after shaving</b>	Your skin needs some time to adapt to the electric shaver	After 2-3 weeks of adaptation, the symptoms disappear
<b>Unable to charge</b>	Electric shaver damaged Charging ambient temperature is too low or too high	Return to after-sales service Charging is an environment between 5°C and 35°C
<b>After full charging, Shaving time is less than 60 minutes</b>	Shaving time depends on your shaving style Cleaning habits are related to beard density	

### Environmental protection information

**Environmental protection:** the built-in rechargeable battery of this product contains substances that may pollute the environment, and the battery should be disposed of safely. Before discarding the electric shaver, the battery must be taken out and sent to the official designated recycling station for disposal. You can also send the discarded electric shaver to the maintenance department designated by the company, and the maintenance department will decompose and recycle the battery.

**Remove the battery:** cut off the power supply and let the electric knife run until the power is exhausted. Unscrew all screws on the electric shaver. Disassemble the electric shaver and take the battery.

**⚠️ Only remove the rechargeable battery when discarding the electric shaver**

#### Product specification

Product	Magnetic intelligent shaver
Model	FK-707
Rated input	5V=1A(USB)
working voltage	3.2V=1
Rated power	5W

Please keep this manual for use

LED intelligent display

Reciprocatng veneer knife net

Magnetic suction blade

Type-C interface

60 minute fast charging

80 minute long battery life

Long press to unlock or lock

Whole body washing

FK-707  
instruction manual