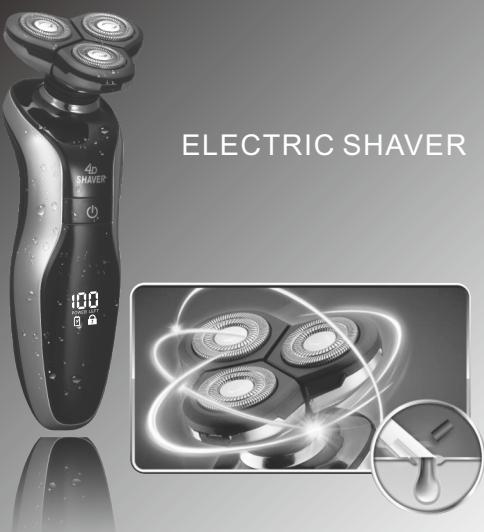
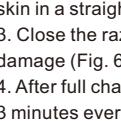
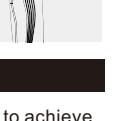
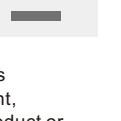


<h2>ELECTRIC SHAVER</h2> 	<h3>ATTENTION</h3> <p>Before using this product, please read the instructions carefully and keep them for future reference.</p> <ol style="list-style-type: none"> Randomly distribute the charging cable. Please use the adapter of 5V 1A for charging. Universal voltage of 100V~240V. If the charging cable is damaged, a new charging cable with the same model should be replaced to avoid danger. The charging and storage temperature of the product shall be between 5°C and 35°C. Ensure that charging is not wet (Fig. 1). Before cleaning the razor under the tap water, be sure to unplug the charging cable (Fig. 2). The waterproof level is IPX7, and the razor can be immersed in water for washing. Persons (including children) who are physically unfit, sensory or mentally deranged or inexperienced shall not use this product except under the supervision or guidance of their safety supervisor. <p> </p>	<p>9. Please take good care of the children and keep them away from this product.</p> <p>10. When charging the razor, press the switch button and return to the closed state for charging.</p> <p>11. When traveling, you must make sure to cover the protective cover of the razor to protect the razor head.</p> <p>12. If the razor does not work by pressing the switch, open the head and remove the inner whiskers.</p> <h3>CHARGING</h3> <p>Make sure the product is in the state of power failure before charging. (machine switch is closed)</p> <p>The charging time is about 1.5 hours.</p> <p>This product is best not to charge continuously for more than 24 hours.</p> <p>((Note: After being fully charged, the screen number displays "100" and stays on.))</p> <p> </p>	<p>1. Insert the product charging wire into the razor (Fig. 3).</p> <p>2. Plug the USB interface into the power connection interface.</p> <p>3. The charging indicator is on (Fig. 4).</p> <p>4. Pull out the plug of the charging cable after it is fully charged.</p> <h3>PRODUCT INSTRUCTIONS</h3> <p>shaving</p> <ol style="list-style-type: none"> Press the on/off button to start the razor. Move the shaver head component quickly on the skin in a straight line and circle (Fig. 5). Close the razor protection cover after use to avoid damage (Fig. 6). After full charge, the razor can be used for 3 minutes every day for about 15 days. <p> </p>	<h3>FUNCTION DISPLAY</h3> <p> BATTERY DISPLAY When the product is being charged, the digital display will gradually increase, and the digital display will remain on, showing "100 charging completed".</p> <p> LOCK REMINDER When traveling or carrying on business trips, you can press and hold the travel lock for 3 seconds to activate it, in order to prevent the shaver from starting on its own due to shaking.</p> <p> CHARGE REMINDER When the remaining battery level is less than or equal to 10%, the charging symbol flashes to remind charging.</p> <p>TIPS: When the battery is low and cannot be turned on, quickly charge for 5 minutes and shave at least once. If not used for a long time, please charge the battery every six months. It can be used for 60 minutes on full charge.</p>
<h3>CLEANING AND MAINTENANCE</h3> <p>Razors must be cleaned regularly to ensure better shaving.</p> <p>The simplest and most hygienic way to clean this product is to rinse the shaver head parts and storage room with water after each use.</p> <p>Be careful when using hot water.</p> <p>Be sure to check the water not to overheat, to avoid injury.</p> <p>Daily attention: shaver head parts and hair storage room.</p> <ol style="list-style-type: none"> Disconnect the razor power supply and make sure the charging cable is pulled out. Open the razor head part (Fig. 7). Clean the shaver head parts and hair storage room with hot water (Fig. 8). Wash the surface of the product (Fig. 9). close the razor blade parts, shake off the remaining water. <p>  </p>	<p>Do not wipe the razor blade with a towel or paper towel, this may cause damage to the razor blade.</p> <p>6. Open the head part of the razor again and keep it open to dry the product (Fig. 10).</p> <p>You can also use the brush provided at random to clean the hair shed. Do not wash with water.</p> <p>Hair clippers (optional) (Fig. 11)</p> <p>Nose hair scissors (optional) (Fig. 12)</p> <h3>REPLACE</h3> <p>Razor head should be replaced once a year to achieve the best shaving effect.</p> <p>If not damaged by human factors, the razor will have a long service life.</p> <p>Damaged or worn razor head can only be replaced with the same type of head product.</p> <ol style="list-style-type: none"> Remove the old razor head assembly from the razor (Fig. 13). <p>   </p>	<p>2. Insert the interface of the new razor head assembly into the groove (1) on the razor, then press the razor head assembly (2) down so that it fits on the razor ("click" is heard) (Fig. 14).</p> <h3>ACCESSORIES</h3> <p>provided: charging cable, brush and knife head protection cover.</p> <h3>THE ENVIRONMENTAL PROTECTION</h3> <ol style="list-style-type: none"> If you want to discard this product, please do not put it with the general household garbage, but hand it over to the officially designated environmental protection recycling center (Fig. 15). The built-in rechargeable battery contains substances that may pollute the environment, so the battery must be removed from the product or sent to an official designated recycling center for treatment before being discarded. It should not be taken out unless the battery is exhausted. Please make sure that this product is not connected to the charging cable. <p>  </p>	<p>2. Turn on the razor switch to make it continue to run until it stops; Then unscrew the bolt and turn on the razor (Fig. 16).</p> <p>3. Remove the battery.</p> <p>Do not reconnect the shaver to the power supply after removing the battery.</p> <h3>WARRANTY & SERVICE</h3> <p>The warranty service is only valid for faults occurred during normal operation and does not include all man-made damages, such as: improper wiring; Improper use of parts; Failure to follow instructions; Accidental damage during transit; Repair and modification without authorization of the company; Damage caused by error of operation or negligence; Improper installation, etc.</p> <p>This warranty service does not cover the cost of accessories, auxiliary equipment, transportation and maintenance personnel services.</p>	<h3>PRODUCT INFORMATION</h3> <p>Product: electric shaver Model: FK-310 Battery type: lithium battery Rated input: 5V:1A Rated power: 5W Charging time: 1.5 hour Usage time: 100 minutes</p>