

105铜版 三折页

95X140mm

User Manual: Hair Straightener



The Instruction Manual For The Hair Straightener
Thank you for purchase of the hair straightener.
Please read the following instructions before operating the equipment.

FUNCTION

- Straighten hair
- Compress and correct the hair
- Lead light and keep shiny
- Protect hair and keep color

CHARACTER

- Easy to operate
- With high technology, quickly heat and keep a constant working temperature
- Feel comfortable and make your hair shiny
- Design for professional using

SPECIFICATION

- Rated voltage :AC 110-240V~ 50/60Hz 70Watts
- Temperature :100-230F

HOW TO USE

- Insert the power plug into the power outlet.
- Turn the switch on to the position "on"
- It will be heating up to the regulate temperature in seconds.
- It will keep a constant temperature.
- Completed use, please turn off the switch.
- For best results wash dry and comb hair until just damp to touch-although the professional hair straightener can be used for touch ups at any time.


CAUTION


- Do not immerse the iron in water.
- Do not use the iron on wet hair.
- Do not touch the plates while hot.
- Do not place on plastic or heat sensitive surfaces.

- Keep away from children.
- Do not operate any appliance with a damaged plug or cord if it has been damaged in any manner.
- The iron is only intended for use as a hair styling iron and only with products specifically designed for use with a heated styling iron.
- This equipment should be used with the regulate voltage.
- Please do not attempt to dismantle the iron. There are no user serviceable parts inside.

Warning:

- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Don't touch the high temperature area in order to avoid scald when the appliance in use.

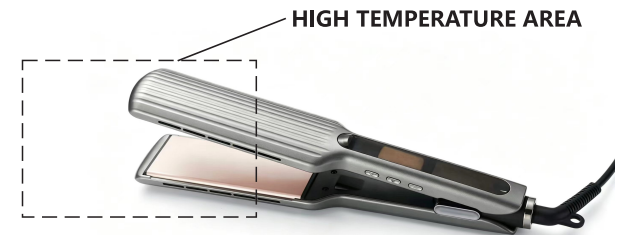

 This Symbol On The Product Or In The Instruction Means That Your Electrical And Electronic Equipment Should Be Disposed At The End Of Life Separately From Your Household Waste. There Are Separate Collection Systems For Recycling In The European Union, For More Information Pis Contact The Local Authority Or Your Retailer Where You Purchased The Product.

A.C.Salon Hairdryer

INSTRUCTION BOOKLET
220-240V 50/60Hz 2000~2200W

Please READ and RETAIN for future reference.

1. Heat switch with 3 heat settings;
2. On/Off switch with 2 speed settings
3. Salon slim concentrator
4. Removeable air filter
5. Hanging loop
6. Diffuser available

USING YOUR AC HAIR DRYER

PREPARING FOR USE

Please read these instructions before operating and retain for future reference.

1. Remove all packaging and keep safe until satisfied your hair dryer is operating correctly
2. DO NOT plug in until ready to use
3. Wash and condition hair as you would normally
4. Ensure hands are dry and hair is not dripping wet
5. Always blot hair dry with a towel to remove excess moisture
6. If desired, attach the Salon Slim Concentrator to the nozzle of the hair dryer
7. Plug the unit into a suitable mains supply and switch on

Instructions for use

The dryer can independently regulate air flow and temperature.

The green buttons (switches) on both sides have two functions: as an on/off switch and as regulator of the air flow. The 1st pressing = middle air, the 2nd pressing = strong air, the 3rd pressing = off; The red buttons (switches) on both sides regulate the outlet air temperature. The 1st pressing = warm/medium, the 2nd pressing = warm, the 3rd pressing = cold.

HINTS AND TIPS

1. As a general guide use higher heat/speed settings for initial drying, rough drying and thicker heavier hair. Use lower setting for finer hair, to complete your styler and for more precise control
2. Use concentrator to help direct airflow

ADDITIONAL INSTRUCTIONS AND CAUTIONS

1. Never put the hair dryer down on soft furnishings, bedding or close to a wall or other surface. Never cover the hair dryer
2. After use or leaving the hair dryer unattended, always unplug from mains supply.

CLEANING AND MAINTENANCE

1. **Switch the hair dryer off**, unplug from the mains and allow to cool fully
2. **Wipe over the casing** using a soft damp cloth(If necessary a little washing up liquid may be used) **Do not immerse the unit in water or and other liquid**
3. Remove and wash the concentrator in warm soapy water
4. Ensure all parts are dried thoroughly with a soft towel before reusing
5. Do not use harsh abrasives or cleaners. Withdraw the filter and remove any build up of hair and dust
6. This appliance is fitted with a rear mesh. To prevent an ingress of hair, dust or fluff and it **MUST** be kept clean. Regularly clean the internal filter by twisting and removing the rear inlet grille(5). Withdraw the filter and remove any build up of hair and dust.
7. if you have long hair or use high amount of styling products, clean the filter regularly. i.e. at least once a month.
8. Never attempt to clean the filter by inserting an implement

STORAGE

Ensure the hair dryer is completely cool and hair dry. **DO NOT wrap the supply cord around the appliance.** Store in original box in a cool, dry place.

IMPORTANT SAFE GUARDS

ALWAYS...

- √ always keep rear air inlet grille and filter dust and fluff free
- √ always return malfunctioning appliance for repair as stated in after sales service
- √ always ensure hands are dry and hair is free from excess water before handling the plug or switching on the appliance.
- √ always unplug the hair dryer from the power supply when not in use, prior to use, when setting down and before cleaning
- √ always keep out of reach of children
- √ always take special care when using near children or people who are insensitive to heat
- √ always allow to cool before cleaning and storing away.

NEVER

- × never immerse electrical appliance in water
- × never use in a bathroom or near any source of water/liquid
- × never use outdoors
- × never wrap the mains lead around the hair dryer. Avoid twisting or kinking it
- × never carry or suspend the hair dryer by mains lead
- × never allow air inlet or outlet grilles to become even partially blocked
- × never use other attachments other than these supplied
- × never cover the hair dryer, or put down on soft furnishings or bedding or against a wall or upright surface.
- × never use after malfunction or damages to mains lead occurs
- × never use for any purpose other than these described in these instructions.

