


I、 Product diagram

Model: **CM6677**

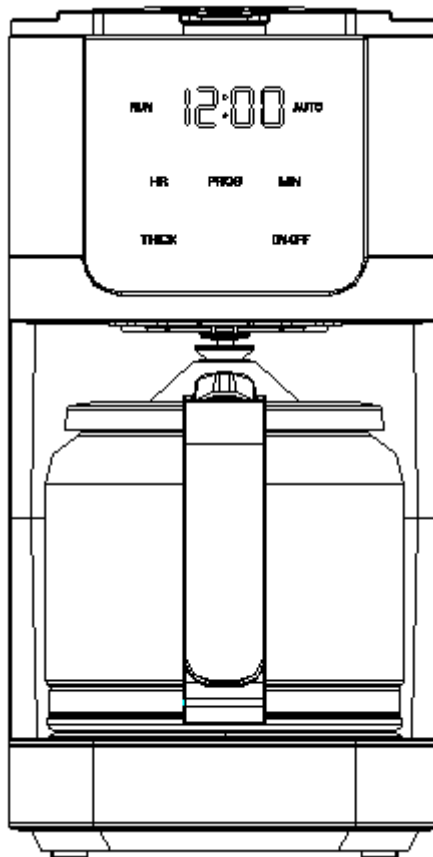


II、 Important Safeguards


1. Check the voltage of the socket corresponding to the rating label of the coffee machine before use.
2. Close supervision is necessary when your appliance is being used near children.
3. Don't use this machine in hot, high-magnetic or wet places. Don't put the coffee machine on hot things, near fire, or on other appliances like fridges.
4. Before cleaning or when not in use, unplug the machine and allow it to cool before cleaning the parts.
5. Don't use the machine if the power cord or plug is damaged, if the machine malfunctions, or if it is damaged in any way. Return it to the nearest authorized service center for inspection and repair, or contact the dealer.

6. Place the coffee machine on a flat surface or table, and ensure the power cord does not hang over the edge of the table or counter.
7. Don't use the machine outdoors. Keep the coffee machine in a dry environment.
8. Make sure the power cord does not touch the hot surface appliance.
9. Don't touch the hot parts of the coffee machine (such as the funnel, warming plate, and air vent on the water tank cover). Only touch the low-temperature plastic components or the cup handle.
10. If the carafe leaks or water overflows from the lid while brewing coffee, stop using the machine immediately. Reposition the cup to align the lid's central hole with the funnel's water outlet.
11. Don't operate the machine without water.
12. Only use the glass carafe provided with this product. Handle with care to avoid damage. Discontinue use if the carafe is cracked.
13. Don't place the carafe on stoves or other high-temperature surfaces.
14. Never leave an empty carafe on the warming plate for prolonged dry heating, as this may cause the glass to crack.
15. Before use, plug the power cord into a socket. To disconnect, pull the plug out of the socket.
16. Don't place an empty carafe directly on the warming plate for dry heating.
17. Avoid opening the water tank lid while the coffee machine is brewing.
18. Keep this manual for future reference.
19. Don't use the machine if the power cord or plug is damaged, if the machine malfunctions, or if it is damaged in any way. Return it to the nearest authorized service center for inspection and repair, or contact the dealer.
20. Don't immerse the coffee machine or power cord in water or any other liquid for cleaning.
21. For household use only. Don't use for other purposes.

III、Parts and Installation Diagram:

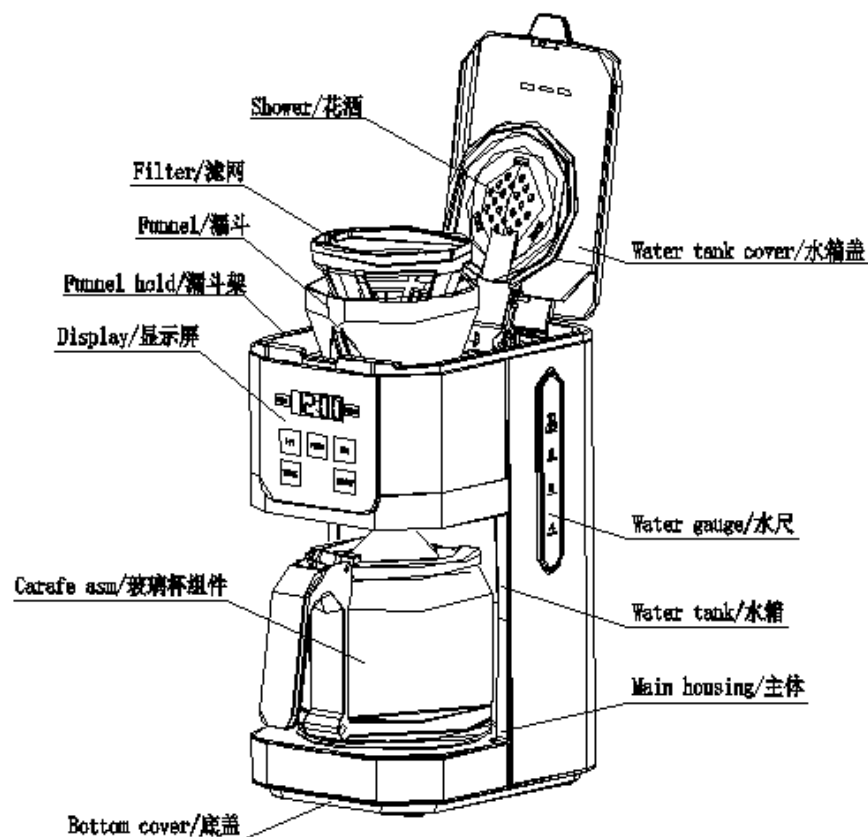

Control Panel Operating Section:

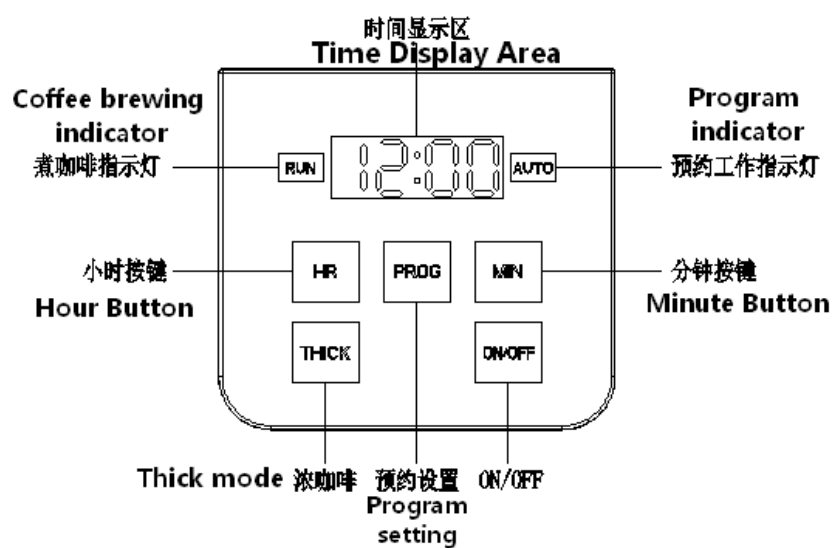

IV、Technical Specifications

- 1.Voltage: 230V
- 2.Frequency:50Hz
- 3.Power: 1000W
- 4.Water tank capacity: 1500mL
- 5.Ambient temperature: 20-30°C
- 6.Sizes (L x W x H): 223.0*170.0*340.0mm
- 7.Net Weight: 2.11KG
- 8.With automatic program control, featuring auto power-off function.

V、 Operating Section:

Before first use, check that all accessories are complete and the product is undamaged. Don't add coffee grounds. Fill the water tank to the maximum level with clean water, brew 1-2 times and discard the water. Thoroughly clean the carafe, lid, funnel, filter, coffee spoon and other parts with warm water.

Immediate Coffee Brewing

1. Open the water tank lid, pour an appropriate amount of water into the tank using a suitable cup, then close the water tank lid;
Note: The water level must not exceed the maximum mark or be lower than the minimum mark.
2. Unscrew the funnel, place the filter inside, and ensure the filter is laid flat and properly positioned;
3. Add an appropriate amount of coffee grounds to the filter, using the ratio of one level spoon of coffee grounds per cup. You can also increase or decrease the amount of coffee grounds according to personal taste.
4. Shake the filter for even grounds, then screw the funnel back and lock it.
5. Place the carafe horizontally on the warming plate, ensuring the protruding base of the carafe fits fully into the plate.
6. Connect to the power supply. The product will “beep” once, all lights on the display will flash 3 times, then only the “ON/OFF” button light glows dimly and all other lights turn off (standby-off mode).

7. Press the “ON/OFF” button on the control panel; the button light changes from dim to flashing (standby mode).
8. Press the “ON/OFF” button again, the button light changes from flashing to steady on, the “RUN” indicator on the panel lights up, the time display shows 12:00 and the coffee machine starts working. Press the “ON/OFF” button at any time to stop operation during brewing. Other buttons are inoperable and the product will beep 3 times if pressed during operation.

Note: The carafe can be removed to pour coffee at any time, and the coffee dripping will stop automatically. Don’t leave it removed for more than 20 seconds, otherwise coffee may overflow from the edge of the funnel.
9. Don’t open the water tank lid during coffee brewing, to avoid scalding by steam or damage to the machine caused by hot water backflow.
10. Wait until the coffee dripping stops (about 1 minute after dripping ceases), then you can remove the carafe and pour the coffee for drinking. Note: The brewed coffee may be slightly less than the water added due to water absorption by coffee grounds. Additionally, the warming plate will be extremely hot during operation – don’t touch it!
11. Turn off the power and unplug the machine promptly after use.

Note: Never immerse the coffee machine or power plug in water or any other liquids. The freshly brewed coffee is extremely hot; handle with care when pouring to avoid scalding by boiling coffee.

Programmable Coffee Brewing

This coffee machine is equipped with a programmable brewing function. Prepare the machine by following Steps 1-7 for immediate brewing as stated above.

For example: if the current time is 8:30 and you want the machine to brew coffee automatically at 14:30, follow the steps below.

(Note: The machine displays time in 24-hour format.)

1. Press the “**PROG**” button on the control panel; the “**RUN, HR and MIN**” indicators will flash. Set the current time (8:30) by repeatedly pressing the Hour and Minute buttons.
2. Press the “**PROG**” button once more. The “**RUN**” indicator will turn off, and the “**AUTO, HR and MIN**” indicators will flash. Set the programmed time (14:30) in the same way by pressing the “**Hour and Minute**” buttons continuously. If no further operation is performed within 10 seconds after setting, the “**AUTO**” indicator will stay on, the indicator for the “**PROG**” button will light up, and the

machine will automatically enter the programmed brewing mode.。

3. Press the “**PROG**” button a third time. The “**AUTO**” indicator remains on and the “**PROG**” indicator lights up, confirming the machine is in programmed mode and ready for automatic operation.

4. The machine will start brewing automatically at the preset time (the “**AUTO** and **PROG**” indicators turn off, while the “**RUN** and **ON/OFF**” indicators light up). After brewing is complete, the carafe will keep coffee warm if the power is not turned off manually. The machine will automatically power off after 28±2 minutes of operation, with only the “**ON/OFF**” indicator glowing dimly and all other indicators off.

5. Notes:

(1) To cancel the programmed brewing, press the “**PROG**” button once – all relevant indicators will turn off, the programmed setting will be cancelled and the machine will enter standby mode (the “**ON/OFF**” indicator flashes). Press the “**ON/OFF**” button to switch to immediate brewing mode.

(2) To reset the programmed time before the preset hour, press the “**PROG**” button twice in a row and reconfigure the time as needed.

Thick Coffee Brewing

This coffee machine features the thick coffee brewing function. Prepare the machine by following Steps 1-7 for immediate brewing as stated above.,

1. Press the “**THICK**” button on the control panel, and the indicator light on the button will turn on. Then press the “**ON/OFF**” button (the light changes from flashing to steady on), the “**RUN**” indicator on the control panel will light up and the coffee machine starts working. Brewing thick coffee takes a longer time, and the brewed coffee has a thicker taste.

2. For programmed thick coffee brewing: Press the “**THICK**” button first (the indicator light turns on), then complete the settings by following Steps 1-3 for programmed coffee brewing as stated above. The machine will automatically enter the programmed thick coffee brewing mode.

3. The machine will start brewing automatically at the preset time (the “**PROG**” indicator turns off, and the “**RUN, ON/OFF** and **THICK**” indicators light up simultaneously). After brewing is complete, the machine will keep the coffee warm if the power is not turned off manually. It will automatically

power off after 28±2 minutes of operation, with only the “**ON/OFF**” indicator glowing dimly and all other indicators off.

VI、Daily Cleaning & Maintenance

WARNING: Unplug the machine and allow the warming plate to cool completely before cleaning to prevent scalding. Never immerse the coffee machine or power plug in water or any other liquids to avoid hazards.

1. After each use, open the water tank lid and remove the funnel. Dispose of the coffee grounds from the filter, then clean the filter and carafe assembly with warm water. A mild cleaning agent may be used if necessary.

Note: These components are dishwasher safe.

2. Wipe the exterior surface of the machine with a soft, damp cloth to remove dirt and stains.

3. Water droplets may form on the funnel and drip onto the warming plate during brewing. Wipe the affected areas clean after each use.

Descaling (Mineral Deposit Removal)

To ensure optimal performance of the coffee machine, descale to remove mineral deposits regularly, depending on the water hardness in your area and frequency of use. Follow these steps:

Fill the water tank with a suitable vinegar solution (1 part vinegar to 3 parts water). Don't add coffee grounds. Run the **Immediate Coffee Brewing** cycle with the vinegar solution; repeat if needed until no yellow liquid drains out. Discard the vinegar solution, then run several cycles with pure water until all vinegar odor is eliminated.

VII、Coffee Brewing Tips:

1. For a perfect brew, the coffee machine must be kept clean. It is essential to clean the machine regularly in accordance with the **Cleaning and Maintenance** section, and always use fresh

water for brewing.

2. Store unused coffee grounds in a cool, dry place. Once a pack of coffee grounds is opened and used, seal it tightly and refrigerate to preserve freshness.
3. For the best flavor, purchase whole coffee beans and grind them just before brewing.
4. Don't reuse coffee grounds, as this will significantly reduce the coffee's aroma. Reheating brewed coffee is also not recommended, as coffee has the richest flavor immediately after brewing.
5. Over-brewing may cause small oil droplets to form on the surface of black coffee. Clean the machine promptly if this occurs.
6. The risk of oil droplets forming is higher when using heavily roasted coffee grounds.

Environmental Protection

It is everyone's responsibility to protect the environment.

Please comply with local regulations: Dispose of the used appliance at a designated waste recycling center.

