

Instruction Manual

General Safety Instructions

- Before using this kettle for the first time, please read the instruction manual carefully.
- Please keep the instruction manual, warranty certificate, the sales receipt, and if possible, the carton with the inner packaging.
- This kettle is intended for household use only, not for commercial purposes.
- Switch off the kettle and remove the plug from the socket when the kettle is not in use. When you disconnect the power cord of the kettle, grasp and pull the plug, not the cord/cable.
- Switch off the kettle before cleaning the kettle.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Test the kettle and the cord/cable regularly for damage. Check that the kettle is operating properly. If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
- Do not attempt to repair the kettle yourself, only authorised and qualified personnel may repair this kettle.
- Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges and the like.
- Use only original accessories, do not connect incompatible products.
- Do not use the kettle outdoors.
- The base and exterior of the kettle are not water-resistant, keep it dry at all times.
- Under no circumstances must the kettle be placed in water or any liquid or come in contact with liquid. Do not handle the kettle with wet or moist hands. Should the kettle become wet or moist, remove the main plug from the socket immediately.
- DO NOT touch the contents of the kettle.
- The kettle should not be used for any purpose other than boiling water. Other liquids or food can contaminate the inside of the kettle.
- The kettle is only to be used with the stand provided.
- If the kettle is damaged or not functioning correctly, stop using it and unplug immediately.
- Avoid water spillage on connector during use.
- Warning: If the kettle is overfilled, boiling water may be ejected.
- Warning: Never immerse the kettle in water or other liquids.

Special Safety Instructions for the Kettle

- The water level must be between the "MAX" and "MIN" marks.
- The kettle body must be compatible with the base.
- Always ensure the lid is securely closed before boiling
- The base and exterior of the kettle must not become wet.
- Switch the kettle off before removing it from the base.

First Use of the Kettle

- Before first use, fill the kettle with cold water and boil it twice without any additives.
1. Fill the kettle with water. Do not overfill. Use the water level indicator.
 2. Place the kettle on the base.
 3. Electrical connection.

- Check whether the electrical voltage which you intend to use is the same as that of the kettle. Details can be found on the label on the base of the kettle.
 - Only connect the kettle to a properly installed socket.
4. Switch on the machine. The light indicator shows that the water is being boiled.
 5. After boiling, the kettle switches off automatically.
Disconnect the kettle from the mains electricity supply.
Do not open the lid when pouring.
 6. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

How to care for your kettle

- Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders.
- When impure water (containing minerals such as calcium and magnesium) is heated, scaling may occur. Over time, limescale deposits will accumulate, particularly on the heating element. The rate of scaling depends on your local water hardness and the frequency of kettle use.
- Limescale is not harmful to health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled regularly.

Descaling Instructions

- Descale kettle regularly. With normal use: at least twice a year
1. Fill the kettle to the "MAX" mark with a 1:2 mixture of vinegar and water. Switch on and wait for the appliance to switch off automatically.
 2. Let the mixture remain inside the kettle overnight.
 3. Discard the mixture the next morning.
 4. Fill the kettle with clean water up to "MAX" mark and boil again.
 5. Discard the boiled water to remove any remaining scale and vinegar.
 6. Rinse the inside of the kettle with clean water
- Commercial descaler and cleaner may also be used. Please ensure you follow the instructions carefully for your chosen descaler and cleaner.

Cleaning Instructions

Always unplug the kettle before cleaning.

Clean the exterior, if needed, with a slightly damp cloth without additives.

Power Supply:

220-240V~, 50-60Hz, 1850-2200W

Operating Instructions



1. Temperature Icon
2. 40°C (Milk)
3. 70°C (Honey)
4. 80°C (Green)
5. 90°C (Coffee)
6. Temperature Increase/Decrease button
7. Keep warm
8. Power (On/Off)

Basic Operation:

1. Temperature Icon: Show the real-time and setting temperature
2. 40°C (Milk): Under setting interface, Press 40°C shortly, enter the mode of relevant temperature 40°C
3. 70°C (Honey): Under setting interface, Press 70°C shortly, enter the mode of relevant temperature 70°C
4. 80°C (Green): Under setting interface, Press 80°C shortly, enter the mode of relevant temperature 80°C
5. 90°C (Coffee): Under Setting interface, press 90 °C shortly. enter the mode of relevant temperature 90°C
6. Temperature Increase/Decrease button: Single press **+** **-**, setting from 40-100°C in every 5°C as level.
7. Keep Warm Key: Under setting interface, press the **⋈** key once and the buzzer will sound "di" and the **⋈** light in twinkle status. At the same time, after selecting the required setting temperature by pressing the increase/decrease button or directly selecting the 40°C, 70°C, 80°C, 90°C button on the setting interface, it will automatically enter the keep warm state. The keep warm time is 2 hours. When the water temperature is lower than the set value of about 5 degrees, the heat will be resumed until 2 hours.
8. Power button: Under Setting interface, press **⏻** shortly. And the buzzer sound "DI", and the temperature show 100°C, the four buttons **+** **-** **⋈** **⏻** all light on. The temperature icon show the current real time temperature and enter boiling status. After boiled, The buzzer sounds "DI DI". These three buttons **+** **-** **⋈** lights off, and the temperature show will be off after 30 seconds. The power button switch to breath light.
9. In the state of keep warm, after boiling water to the set temperature, the function of memory starts. Within ten times of kettle lifting, the water temperature of the kettle should not be less than 8 degrees below the set value for each time, and the memory is effective, that is, the keep warm continues to work and the time of keep warm continues to the last time. Otherwise exit the keep warm.