



360 DEGREE ROTATION

1.7L AUTOMATIC ELECTRICAL KETTLE

220-240V 50/60Hz, 1850-2200W

Safety advice

Read the following instruction carefully before using the appliance for the first time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
 - The supply cord is damaged
 - The housing is damaged

*The appliance must only be connected to an earthed socket.

If necessary an extension cable suitable for 10A can be used.

*If the appliance or the supply cord is damaged, it must be replaced by the manufactory, its service agent or similarly qualified person, in order to avoid hazard.

*Always place the appliance on a flat, level surface.

*The appliance must be switched off and the mains plug withdrawn before cleaning and maintenance.

*The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.

*The mains cable must not come into contact with any hot parts of the appliance.

* Do not immerse the appliance in water or any other liquid. Attention: If the kettle is overfilled there is a

risk that the boiling water may spray out, which could scald or burn! Therefore never fill the kettle above the maximum marking.

- * Never operate appliance with open lid.
- * Do not use or place the appliance on a hot surface or near source of heat.
- * Only use the kettle for heating water!
- * The kettle can only be used with the stand provided.
- * Appliance is for indoor use only.
- * This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- * This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- * Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- * Keep the appliance and its cord out of reach of children less than 8 years.
- * WARNING: Do not remove the lid while the water is boiling.
- * CAUTION: Position the lid so that steam is directed away from the handle.
- * The heating element surface to residual heat after use.

Getting started

1. Before first use, rinse the inside and wipe the outside of the kettle with a damp cloth.
2. Press the button to open the lid, pour water into the kettle. It is also possible to fill the kettle through the spout, without opening the lid. Make sure water level is visible in the water level indicator, but not exceeding the MAX. mark.
3. Place the base unit on a firm and flat surface. Plug the mains plug into a wall socket. Excess cord can be wound into the bottom of the base unit.

Features



Using

1. Fill at least 0.5L to ensure that the temperature shown on the display reliable.
Recommended temperature:



Button Instruction:

Prepare

After inserting the base power cord into the socket, place the base in a flat and dry place. Place the kettle on the base, make sure that the pot is filled with water and the water level is not higher than the maximum water level. At this time, the product makes a "beep" sound, all button lights and LED displays light up and then go out, and the display resets to "188".

In the power-on standby state, the start button flashes a white light.

Boil

Press the "On/Off" button, after two "beeps", it directly enters the boiling state, and the white light is always on.

When the water boils to 100°C, the buzzer beeps once to indicate the end of the boiling, the display shows "100" flashing for 5 seconds. If there is no operation for 5 minutes, the kettle turns off automatically. During the working process, press the "On/Off" button at any time to cancel the work.

Additional Function: "Customized Boiling Point"

In the standby state, when the LED display is "188", long press the "On/Off" button for 3 seconds, the display will show the current water temperature. Continuously press "+/-" to adjust the temperature within the 80°-100° range, and it will beep to start boiling water after setting.

Temperature Adjustment : "Increase" (+)

In standby mode, press the [+] button continuously to increase the temperature in the range of White Tea 70°C/ Green Tea 80°C/ Black Tea 85°C/ Coffee 90°C/ Herbal Tea 95°C/ Oolong Tea 100°C, and each press will switch to the next function. After setting, it will maintain the set temperature for 1 hour. After 1 hour, it will automatically power off and "beep" to remind.

Temperature Adjustment: "Decrease" (-)

In standby mode, press the [-] button continuously to decrease the temperature in the range of "Oolong Tea 100°C/ Herbal Tea 95°C/ Coffee 90°C/ Black Tea 85°C/ Green Tea 80°C/ White Tea 70°C", and each press will switch to the next function. After setting, it will maintain the set temperature for 1 hour. After 1 hour, it will automatically power off and "beep" to remind.

Keep Warm

Press the "Keep Warm" button once, the buzzer beeps, the "Keep Warm" indicator light flashes for 3 seconds and then enters the keep warm state, and the keep warm indicator light is always on. When the water boils to 60°C, the buzzer beeps once to indicate the end of the boiling, the "Keep Warm" button flashes for 5 seconds, and the indicator light is always on. (Automatically keep warm for 2 hours, and when the water temperature

is below 45°C, it will automatically heat up to 60°C).

Memory and Protection Functions:

1. Boil dry protect: When the kettle is dry and has no power, the LED display works normally, the temperature display 100°C. The work ends, the prompt tone is "Ding-Ding", and it enters the standby state. If a dry boil occurs (temperature > 105°C), in the standby state, if press the "ON/OFF" button, all lights flash, the buzzer emits 10 urgent beeps, the LED displays "E1", and then returns to the standby state.
2. If a short circuit of the temperature sensor occurs, the product stops working, the alarm prompts 10 times, and all indicator lights flash; display the corresponding error code.
3. The product has a kettle body and base separation memory and protection function. During heating or keeping warm, if the kettle body is removed, it turns off and the heating is paused. If the pot body is placed back on the base within 3 minutes, it will continue the previous work state. If it exceeds 3 minutes, it will return to the standby state.
4. If the product is heated to above 85°C and stays at a certain temperature for more than 1 minute, the program defaults to being used in a high-altitude area and the water has boiled, and the product will automatically enter the next stage or standby state.

Sound Prompts:

1. Button sound: Each time the switch or each function button is touched, the buzzer beeps once;
2. When the water is boiled or the set temperature of each function is reached, the buzzer beeps once.

Lighting Description:

1. All display lights are white, including the LED display;
2. Heating state: When the target temperature is not reached, the selected function light is always on;
3. Temperature reduction state: When the current temperature is higher than the target temperature, the "+" and "-" indicator lights flash in a breathing mode;
4. Constant temperature/keep warm state: When entering the constant temperature/keep warm state, in addition to the LED displaying the actual temperature, the rest of the indicator lights are not on;
5. Temperature display: In the heating state, the LED displays the actual temperature.