

# INSTRUCTION MANUAL

**MODEL:** GH-18NL

**PRODUCT:** Indoor&Outdoor Insect Zapper

**Input:** AC220-240V 50/60Hz

## INTRODUCTION

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance.

Remove flying insects without the use of chemicals, sprays or liquids. It uses UV-A LED tube to attract light sensitive flying insects such as flies, moths, mosquitoes and gnats. These insects are killed when they come into contact with an electrocuted metal grid. Ideal for indoor and outdoor use, such as houses, garden , backyard, and anywhere that needs to be kept clear of flying insects.

## IMPORTANT SAFETY INSTRUCTIONS

1. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Household and indoor and outdoor use.
3. High voltage! Do not touch the inner electric grids.
4. Check the local voltage before operating.
5. The lamp in this appliance cannot be replaced. Scrap the appliance when the lamp ceases to operate.
6. Never put metal objects inside the grids while in operation.
7. Keep away from flammables.
8. Keep the appliance and its cord out of reach of children less than 8 years.
9. Do not use in barns, stables or similar places.
10. Do not use in locations where flammable vapor or explosive dust is likely to exist.
11. Unplug the appliance before cleaning. Clean the plastic enclosure/ grille with dry clothes empty the collection tray every week or when need.
12. In the event of an operating problem, stop using the device immediately.
13. Never try to repair the device. There are no user-serviceable parts inside the device. Refer to an authorized dealer for service and/or spare parts.

## **SAFETY TIPS**

1. A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
2. Always switch off and disconnect the power supply to the appliance before cleaning.
3. Install the appliance out of the reach of children.
4. Never insert hands or other objects into the appliance while it is connected to the power supply.
5. Install it at least 1 metre away from food preparation areas.
6. Never use near flammable objects.
7. For INDOOR and OUTDOOR use.
8. Keep all packaging away from children.
9. If the power cord is damaged, it must be replaced by authorized dealer or a recommended qualified technician in order to avoid a hazard.

## **HOW TO USE**

1. Put the plug into the socket.
2. The light will come on and the grid will become electrically charged.
3. If you do not use the appliance for an extended period, remove the plug from the electrical socket.

**WARNING!** Under no circumstances should hands be placed anywhere near the high voltage grid when the appliance is operational.

## **POSITIONING AND GUIDANCE FOR USE**

1. Insect activity will be higher at night. For best results, place unit away from other competing light sources to ensure the catch rate.
2. Away from places at least 1m where food will be prepared or presented.
3. Away from flammable liquids or gases. **DANGER OF EXPLOSION.**
4. The unit should be positioned in between potential entry points, so as to intercept flying insects before they reach sensitive areas.
5. Out of reach from flammable objects like curtains, lace curtains etc.
6. You will typically want to hang your Insect Zapper near the perimeter of your yard, away from seating areas, about 1.5 to 2 meters off the ground. Aim for at least 3 to 6 meters away from where you usually spend time outdoors.

## **CLEANING & MAINTENANCE**

**WARNING!** Always disconnect the appliance from the power supply before cleaning.

1. It is recommended that cleaning is carried out regularly every month.
2. Beware: Never immerse the appliance in water or any other liquid!
3. Clean the outside of the appliance with a damp cloth (water with mild detergent).
4. Never use aggressive cleaning agents or abrasives. Do not use any sharp or pointed objects. Do not use petrol or solvents! Clean with a damp cloth and detergent if necessary. Do not use abrasive materials.
5. Ensure the unit is completely dry before reconnecting it to the power supply.

## **WARNINGS REGARDING SERVICING**

No user-serviceable parts inside. Non user-replaceable light source. The light source in this device shall only be replaced by a qualified person.

- Disconnect from the mains before servicing, cleaning and opening. Wait two minutes to avoid risk of contact with high voltage.
- An electric shock hazard may exist if water from a garden hose is directed at the appliance.
- If the external flexible cable or cord of this device is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



**DISPOSAL:** Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental-friendly and healthy way.