


Portable Speaker User Manual

YF01



OverView

1. Power on/Power off
2. Volume "+"/Next Track
3. Play/Pause
4. Volume "-"/Previous Track
5. Micro SD input SD
6. DC 5V -1A charging input
7. Hands free Port
8. Bluetooth/Charging LED indicator

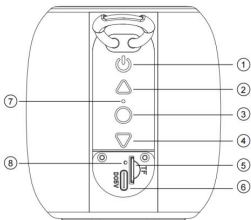

On/Off/Reset

Long press the On/Off button to turn on/off the product.

Note: Press the power button for 8 seconds to power off forcibly if speaker got stuck or no response.

Mode Change:

Short Press the On/Off button on the product to change the modes between Bluetooth/micro SD /FM Mode.

Note: Modes need to be changed Manually. You need to press the On/Off button every time you need to change the mode.

Volume adjustment

Short Press the VOL+ and VOL- buttons on the product to adjust the speaker volume.

Battery charging

The product has a built-in rechargeable battery that can be recharged using the supplied power supply. Before use, it is recommended to fully charge the battery. During the recharging phase, the status of LED will be on (the device will fully recharge in about 2-3 hours). When the device is fully charged the LED indicator will turn off.

LED light effects selection

After turning on the product, you can Double Click on the "On/Off" button to change the effect of the LED lights, there are 7 different effects available.

Note: It can remember the LED effect when you turn on the speaker again. If you turn off the LED, then power off speaker, please help to double Click "On/Off" button to turn on the light when you power on speaker to use again.

Bluetooth function

The product supports music playback via wireless connection to a Smart phone or other compatible device. NOTE: Compatibility with all devices on the market cannot be guaranteed.

Bluetooth connection

Turn on the speaker, select the Bluetooth Mode (the Bluetooth LED will flash quickly)

Search for the name "YF01" from your external device and choose it to pair (enter "0000" if requested).

Once paired, you can start playback from the external device.

During music playback, you can press the Play/Pause button to pause playback. To resume playback, press the Play/Pause button again.

TWS FUNCTION (TRUE WIRELESS STEREO)

If you have two YF01s, you can activate the TWS function which allows you to pair two speakers together and obtain stereo audio reproduction (the speakers will reproduce the same audio at the same time).

Note: In order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.

TWS function activation

Make sure the speakers are not paired with any external devices.

Turn on the two speakers and select Bluetooth mode (the Bluetooth LED will flash quickly).

Double press the "Play/Pause" button on the speaker to start the TWS pairing, a sound will confirm the pairing.

Once paired, the speakers will automatically pair with each other if turned on at the same time.

To deactivate the TWS function and unpair the speakers, Double press the "Play/Pause" button on the speaker after pairing.

MICROSD FUNCTION

Insert a Micro SD card (containing songs in MP3 format) into the slot after turning on the speaker, playback will start automatically.

Short Press "Play/Pause" button to pause/resume playback.

Long Press the "Forward"/"Backward" button to go to the next track /return to the previous track.

Short Press the VOL+ and VOL- buttons on the product to adjust the speaker volume.

Note:Compatibility with all commercially available storage devices cannot be guaranteed.

Hands Free Function

In the Bluetooth Mode, when your call is coming, Short press "Play/Pause" button to receive the call, Press and hold "Play/Pause" button to reject the call.

Note:

- APS110 remembers previously connected devices. Once powered on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "YF01" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

RESET FUNCTIONALITY

- If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality, press the "power on/off" button for 8 seconds to power off forcibly. Then power on the speaker to pair to a new device.

PRODUCT SPECIFICATIONS

Battery: 3.7V, 1200mAh

Output power: 5 W

Dimensions (W x D x H): 86*86*96 mm

Charging: DC 5V 1A

Accessories: Type C Charging cable, user manual