



YW05 BLUETOOTH SPEAKER MANUAL

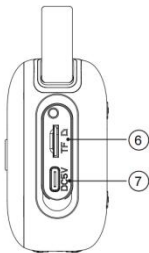

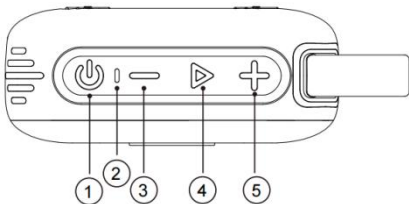

CONTROLS

1. Power on/off, press twice to change the LED light
2. LED indicator
3. Volume-/Previous track button
4. Play/Pause

5. Volume +/-Next track button
6. Micro SD card input
7. Type-C charging port

CHARGING

The speaker must be recharged when switched off.

1. Using the supplied USB cable, connect the Type-C end of the USB cable to the Type-C port (7) of the speaker; connect the other end of the cable to the USB port of a PC or USB charger (5V, 1A, not included).
2. The LED indicator(2) will light up red to indicate the charging status of the speaker; when fully charged, the LED indicator will turn off.

BASIC OPERATION

To turn on the speaker, press and hold the power button (1) .

1. Bluetooth mode. when the speaker turned on, it will be in bluetooth mode.
2. Micro SD mode: If a micro SD memory card is inserted into the micro SD port (6), the speaker will start playing music automatically.

VOLUME ADJUSTMENT

Short press the Volume -(3) or Volume + (5) to decrease or increase the volume.

USING A MICRO SD CARD

1. Turn on the speaker.
2. Insert a micro SD card into the micro SD port (6)
3. The speaker will start playing music automatically.
4. Press and hold the Volume-/Previous track button (3) button to skip to the previous track; press and hold the Volume +/-Next track button (5) to skip to the next track.
5. Press the button (4) to pause or resume the playback.

Bluetooth OPERATION PAIRING DEVICES

1. Place the speaker next to the Bluetooth device to be paired.

2. Power on the speaker .
3. Follow the instructions of your device to search for the speaker.
4. The speaker name is "BTP-127" and will be displayed on your Bluetooth device list, select it and enter the password "0000" if required.
5. When paired successfully, you can stream music from your Bluetooth device to the speaker.

Notes:

- The Bluetooth speaker only can connect to one Bluetooth device at a time, and the connection cannot be interrupted during operation.
- When the Bluetooth pairing fails, turn off Bluetooth on your Bluetooth device that you don't want to connect, restart the Bluetooth speaker and search for the Bluetooth device to be connected again.

COMMANDS IN Bluetooth MODE

1. Press and hold the Volume-/Previous Track button (3) button to skip to the previous track; press and hold the Volume +/Next track button (5) to skip to the next track.
2. Press the button (4) to pause or resume the playback.

TRUE WIRELESS STEREO Bluetooth CONNECTION (TWS FUNCTION FOR TWO SPEAKERS)

1. Power on two speakers and the default setting is the Bluetooth mode (a sound is heard confirming the speaker is set into Bluetooth pairing mode);
2. Turn off the Bluetooth function on your phone or other Bluetooth device, press and hold the play/pause (4) button of either speaker (a sound is heard confirming the TWS function is activated), after a few seconds both Bluetooth speakers will give a voice prompt. Both speakers' Bluetooth are connected;
3. Turn on your mobile phone's Bluetooth, search for the "BTP-127";
4. Find the name "BTP-127" and select it to connect;
5. Bluetooth speaker gives a voice prompt, then you can enjoy the music from two speakers;
6. Press and hold the play/pause(4) button again to quit the TWS function to hear music only from one speaker.

HANDS FREE FUNCTION

When incoming a call, press play/pause (4) button to answer the call, press again to hang up the call.

TECHNICAL FEATURES

| | |
|----------------------------|----------------------|
| Rechargeable Battery: | 3.7V, 1000mAh |
| Output power: | 80W (8W RMS) |
| Charging: | 5V 1A |
| Bluetooth Frequency Range: | 2402MHz~2480MHz |
| Operating Frequency Range: | 120Hz~18KHz |
| Dimensions: | 97(W)*75(D)*37(H) mm |
| Weight: | 240g |