

210mm

145mm

CARE AND CLEANING

Before cleaning the steam iron ensure it is unplugged from the power supply and has completely cooled down.
Do not use abrasive cleaners.

SELF-CLEANING

Fill the half of the water reservoir.
Set the temperature control to its maximum position.
Insert the main plug into the wall socket.
Allow the iron to heat up until the indicator light goes out.
Unplug the steam iron.
Holding the iron horizontally over the sink, change the steam control to the maximum position.
Boiling water and steam will be ejected from the holes in soleplate with impurities washed out.
Move the iron over an old(preferably)piece of cloth. This ensures that the soleplate will be dry during storage.


STORAGE

Unplug the appliance from the power supply, empty the water tank (do it after each use) and allow steam iron to cool down completely.
Wrap the cord around the heel rest.
To protect the soleplate, place the steam iron in an upright position on its heel rest.

SLIVERS CRIEST

STEAM IRON

MODEL:SC-9704

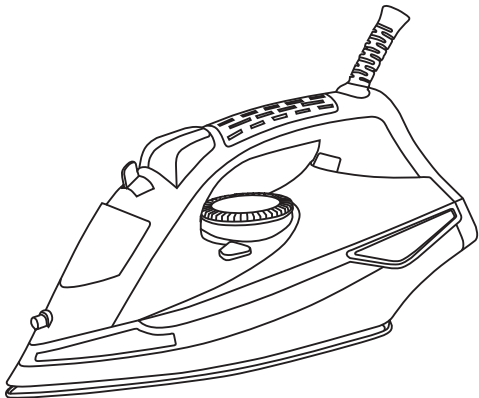

220-240V 50/60Hz 2200W
USER MANUAL

IMPORTANT SAFEGUARDS

Please read the instruction manual before and save it for future reference.
Before switching on check that voltage indicated on the rating label corresponds to the main voltage in your home
For home use only, Do not use for industrial purposes. Use the steam iron only for its intended use.
Do not use in outdoor or in damp area
Do not immerse the steam iron and cord in water or other liquids
Never pull the cord while disconnecting form the power outlet; instead, grasp the plug only and pull to disconnect.
Do not allow the cord to touch sharp edges and hot surfaces
Always unplug the steam iron form the power supply when filling with water or emptying and when not in use.
Do not operate the steam iron with damaged cord or plug, or after the appliance malfunctions, or

has been dropped or damaged in any manner. To avoid risk of electric shock, do not disassemble the steam iron, take it to a service center for examination, repair or mechanical adjustment.
This appliance is not intended to use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
Do not leave the iron unattended while hot or connected or on an ironing board
If ironing is interrupted, stand iron on heel rest only, do not place the steam iron on metal or rough surfaces.
CAUTION: To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

BEFORE THE FIRST USE

Some parts of the steam iron have been slightly greased and as a result the iron may slightly smoke when switched on for the first time. After a short time this will cease.
Remove protection cover from the soleplate and clean it with a soft cloth.

HOW TO USE

Always check whether a label with ironing instructions is attached to an article to be ironed. Follow these instructions in all cases.
Turn the temperature control dial round to set the appropriate temperature indicated in ironing instructions or in fabric label.

LABEL	TYPE OF TEXTILE
	Do not iron this article
•	Synthetics, Nylon, Acrylics, Polyester, Rayon
••	Wool, Silk
•••	Cotton, Linen

Insert the main plug into the wall socket. The indicator light will turn on.
When the indicator light goes out you may start ironing.
If you set the temperature control to lower setting after ironing at a high temperature. it is not recommended to iron before the pilot light switches on again.

WATER TANK FILLING

Unplug the iron before filling the water tank.
Hold the steam iron in horizontal position.

Slowly pour water through the water inlet.
Do not fill higher than mark on the water tank, in order to avoid spilling out of water.

NOTE: Your steam iron is designed to use tap water, However, if the water is very hard, it is advisable to use distilled water.
The water tank should be emptied after each use.

NOTE: if you empty the water tank after the steam iron has cooled down, set the steam iron upright position on its heel rest, plug it in and set the temperature control dial to the maximum position, heat for 2 minutes. Unplug the steam iron from the power supply.

SPRAYING

As long as there is enough water in the water tank, you may use the spray button at any temperature setting during steam or dry ironing.
Press the spray button several times to activate the pump while you are ironing.

STEAM IRONING

Set the temperature control dial to the “.” or “...” position.
Set the variable steam control to the desired position.

CAUTION: Avoid coming in contact with ejected steam.

DRY IRONING

The steam iron can be used on the dry setting with or without water in the water tank, it is best to avoid having the water tank full while dry ironing.
Turn the variable steam control to the minimum position.
Select the setting on the temperature control dial best suited for the fabric to be ironed.
CAUTION: If the steam iron has been used for a long time, it is hot and there is no water. Do not refill it with water until the steam iron cools down.

BURST OF STEAM

The burst of steam feature provides additional steam for removing stubborn wrinkles.
Turn the temperature control to “.” or “...” position.
Turn the variable steam control to the maximum position
Press the powerful steam button to release the burst of steam.

NOTE: To Prevent water leakage from the soleplate, do not keep the powerful steam button pressed for more than 5 seconds.

WHEN YOU FINISHED IRONING

Set the temperature dial to the minimum position.
Remove the main plug from the wall socket.
Stand the iron on heel rest.