

DryPod

INSTRUCTION MANUAL

Model No. C-PCD-3


Please read carefully before use and keep for future reference

WARNING

1. Always keep the machine at least 1.5 meters away from water or fire sources, whether in use or not, Clean it with a damp cloth instead of rinsing with water directly.
2. Ensure that the power supply socket is properly grounded.
3. Before using, make sure the clothes have been spun dry by a washing machine or hand-squeezed to reduce excess water, This prevents water from dripping on to the floor, which could make it damp, Using less water also helps save energy by shortening the drying time and improving electrical isolation.
4. Avoid touching the metal parts of the wind outlet to prevent burns.
5. Keep children away from the machine while it is operating.
6. The machine is designed to dry textiles that can withstand temperatures up to 75°C, with a total weight not exceeding 10 kg.
7. The machine is intended only for drying textiles that have been washed with water.
8. This machine should not be repaired by anyone other than a professional.
9. If the supply cord or plug is damaged, it must be repaired or replaced by a professional or qualified person.
10. Ensure that the wind outlet and intake are well-ventilated.

ASSEMBLY

1. Insert the three standing feet into the corresponding holes on the bottom of the motor unit.
2. Place the waterproof cover over the lower support tube. Then, align the threaded part of the lower support tube with the air outlet nozzles on the motor unit. Screw it in and tighten it securely in a clockwise direction.
3. Align the top of the support tube with the lower support tube connector, then tighten it by turning clockwise.
4. Hang the clothes evenly on the drying racks, place the cover over the racks, and zip it up.
5. To disassemble the machine, simply follow the installation steps in reverse.

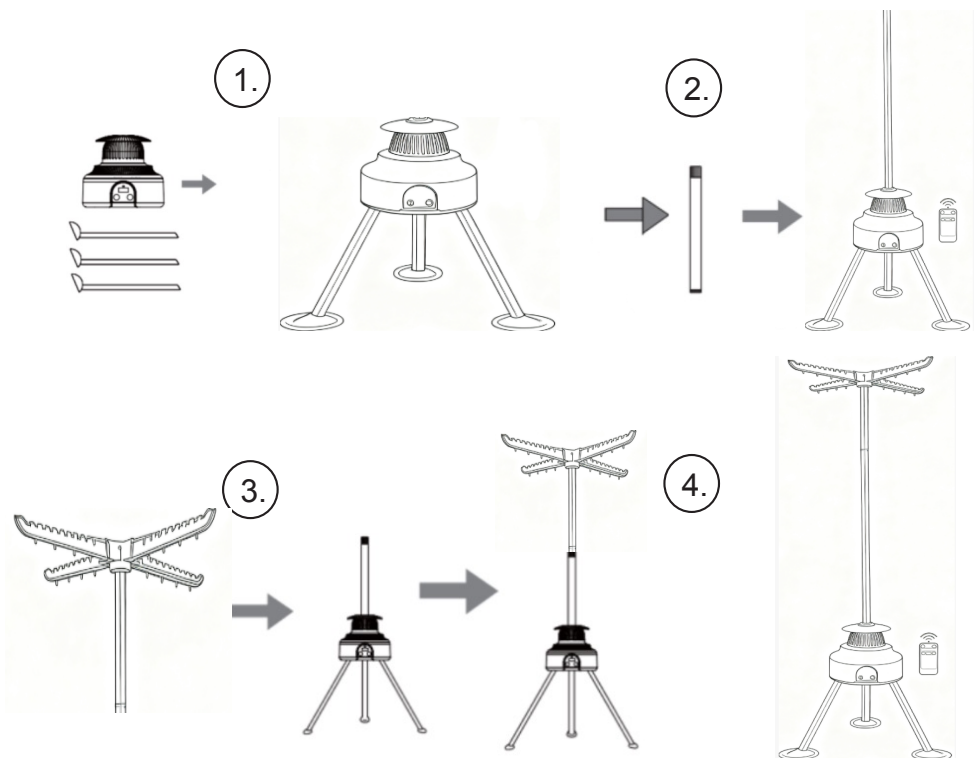

Support Line:

HOW TO USE

Control Panel:

After plugging in, press on/ off button to turn on. The heat appliance has 30 minutes as a default setting. Press the timer button to increase the drying time. Each press is 10 minutes up to 180 minutes.

To reduce the drying time to less than 30 minutes, press timer button until it passes 180 minutes to start at 10 minutes.

To stop drying before the time has finished, press on/off button to turn it off.

Remote control:

After plugging in, press on/ off button to turn on. The heat appliance has 30 minutes as a default setting. Press the timer (+) button to increase the drying time. Each press is 10 minutes up to 180 minutes.

To reduce the drying time to less than 30 minutes, press timer (-) button.

To stop drying before the time has finished, press on/off button to turn it off.

After appliance has been turned off, the fan will still work for a further 60 seconds to cool down the unit.

TROUBLESHOOTING

Number	Problem	Possible issue
1	Drying time too long (>180mins)	• Clothes too thick • Clothes not spin-dried by washing machine or screw-dried by hand. • Cover not closed properly.
2	Machine suddenly stop when working	• Air vent or outlet blocked by clothes. • Having exceeded set time.

TECHNICAL SPECIFICATION

Model: KP-100S

Material: PP+PET

Measurement: 68x68x150 cm

Power: 1200W

Rated Capacity: 10kg Max

Clothes Drying Timer: 180Min Maximum

Support Line: