
# 105mm Integrate beauty into life Instruction Manual FOLDABLE ELECTRIC GLOTHES DRYER MODEL NO.:



AC220-240V~ 50/60Hz 1200W

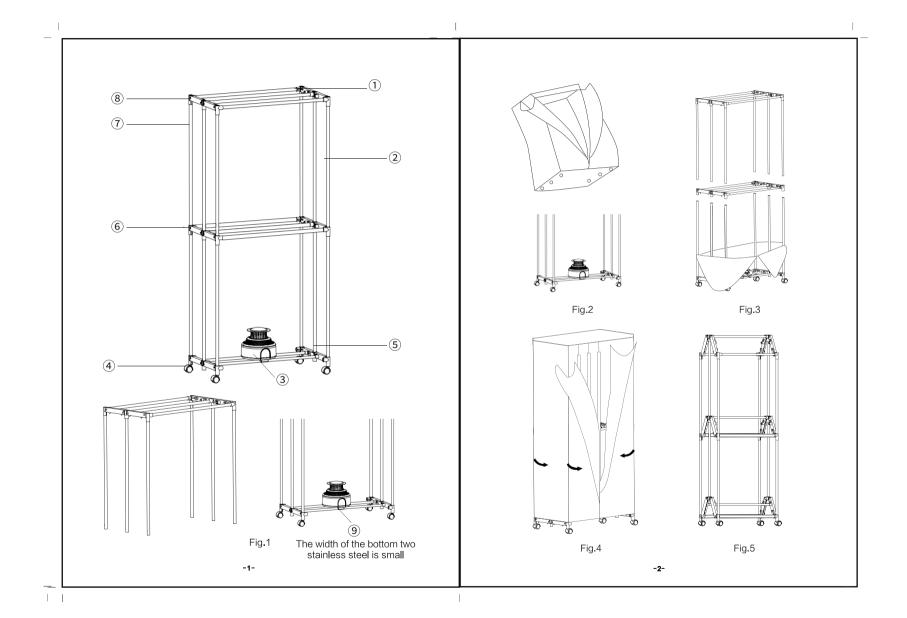

# **CHARACTERISTICS Page 2**

1. Plastic shelf 5. Lower shelf 9. Install the host stainless steel

2.Tube 6.Middle shelf

3.Motor 7.Install the cloth cover

4.Wheel 8.Top shelf

## **PRECAUTIONS**

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLYAS THEY PROVIDEIMPORTANT SAFETY INFORMATION ON THE INSTALLATION, USE AND MAINTENANCE OF THE EQUIPMENT, AND HELP PREVENT MISUSE AND POSSIBLE ACCIDENTS.

- Remove the packaging and make sure the appliance is intact, paying particular attention to the power cord.
- The packaging elements (plastic bags, polystyrene, etc.) must not be accessible to children, in order to protect them from possible sources of danger. It is recommended not to dispose of these packaging materials in the household waste, but to deliver them to the appropriate collection station.
- If the power cord is damaged, it must be replaced by the manufacturer, its technical service, or a person qualified to do so to avoid possible damage.
- Before connecting the equipment, make sure that the supply voltage corresponds to that indicated on the label. The appliance may be damaged if the voltage is not correct.
- In general, the use of multi-plug adapters and / or extensions is not recommended; If necessay please use only single or multiple adapters and extensions in accordance with current safety regulations, making sure that the absorption capacity limit marked on the respective adapters is not exceeded.
- Do not use the appliance if the cord or plug shows any damage.

- Do not let cord hang over edge of table or touch hot surfaces.
- Do not use the appliance after irregular operation. In this case, turn it off and do not open it.
- Consultan authorized after-sales service for repair and make sure that only original spare parts are used.
- Failure to follow these instructions may affect the safety of the appliance.
- This appliance must be intended for its intended use. Any other use must be considered improper and therefore dangerous. The manufacturer is not liable for damages resulting from improper, incorrect or reckless use. This appliance is for household use.
- To protect against electric shock, do not immerse cord, plug, or any part of the appliance in water or other fluids.
- Do not use the device near explosives, highly flammable materials, gases or flames.
- Do not allow children, people with disabilities or people without experience or technical ability to use the appliance without proper supervision.
- Do not handle the appliance with wet hands or feet.
- Never use accessories that are not provided by the manufacturer. The use of accessories not recommended by the appliance manufacturer may cause danger or injury.
- Do not expose the device to atmospheric agents such as rain, wind, snow or hail. Do not use outdoors.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- If you decide not to use the appliance anymore, make it inactive by cutting off the power cord after disconnecting the plug from the socket.
- Let other potential users read these instructions before using the dryer.

# **IMPORTANT SAFETY MEASURES**

- 1. When using the clothes dryer, please follow these basic safety precautions.
- 2. Please read all instructions before use.
- 3. Make sure that the electrical current corresponds to the voltage indicated on the appliance.
- 4. This clothes dryer is for household use only. Not suitable for commercial use or for outdoor
- 5. Place the clothes dryer on a level and dry surface, at least 1.5 meters high distance from any heat or water source. use. It should only be used for the purposes described in this manual.
- 6. Clothes must be spun in the washing machine or drained by hand before being placed in the clothes dryer. Do not use the dryer with leather, silk, wool, delicates or any other item that is not suitable for the dryer.
- 7. To avoid electric shock, do not immerse the unit, cord or plug in water or any other liquid. Never let the cord or plug get wet. Do not touch with wet hands.d before cleaning.
- 8. Always turn the clothes dryer off or unplug before adding or removing parts, after use, and
- 9. Never drag or pull the unit by the power cord or plug. Keep cord away from hot surfaces and sharp edges. Make sure the power cord is arranged so that you cannot trip over it.
- 10. The metal air vent will become extremely hot with use. To avoid burns, keep your hands kept clear. away from the outlet. Let the air outlet cool completely before storing or cleaning.
- 11. Never put objects in the air outlet. Check regularly for obstructions Air flow should be kept clear.
- 12. Never use the clothes dryer without the air outlet cover or the cover in place.
- 13. The tumble dryer must not be used by children who are not

trained to do so, unless that they are adequately supervised by a person responsible for their safe use. Children must be supervised to ensure that they do not play with the clothes dryer. It should not be left unattended during use.

14.Do not use the clothes dryer if the power cord or plug shows any sign of damage, or if the equipment has been dropped, damaged or worked incorrectly. Never try to replace the power cord yourself as this can cause severe injury or electric shock.

### ASSEMBLING THE CLOTHING DRYER

The clothes dryer is quick and easy to assemble.

- 1. Unpack the clothes dryer carefully and discard all packaging.
- 2. With the unit powered off and unplugged, push your foot firmly into the holes on the bottom of the unit.
- 3. Put the tube in the side holes of the plastic shelf, and then put the wheels in the bottom holesof the plastic shelf.
- 4. Place the motor on the lower shelf.
- 5. Place the tubes in the holes in the plastic rack on the bottom shelf.
- 6. Fix the cover on the shelf below.
- 7. Fix the middle shelf.
- 8. Fix the upper shelf.
- 9. Close the zipper of the cover.

### **USING THE CLOTHING DRYER**

- The clothes dryer gets clothes dry regardless of the weather by circulating hot air (up to 75° C) through it. Its powerful fan is silent and efficient, it achieves a total drying time between 1 and 3hours.
- Any clothes that are dryer safe can be used in this dryer. Clothes are placed on their own hangers, which helps reduce wrinkles and the need for ironing. Plastic, wood and metal hangers are suitable

for the clothes dryer.

- We highly recommend that items of clothing be spun in the washing machine or drained by hand before being placed in the clothes dryer to help keep drying times to a minimum and avoid excess dripping on the floor.

NOTE:Always check the clothing label to make sure the garments are dryer safe. The clothes dryer is not suitable for leather, silk or delicates.

- 1. First, make sure the dryer is unplugged and turned off.
- 2. Put your clothes on hangers and hang them on the clothes racks, evenly spaced between them for best results. Please do not exceed the maximum load of 10 kg.
- 3. Open the coverlet and place it over the clothing. Close the zipper and make sure it is securely positioned over the metal air vent. NOTE: Drying will take much longer if the cover closure is not fully closed.
- 4. Plug in and turn on the clothes dryer from the electrical outlet. To use the built-in timer, turn the dial clockwise for the desired time (minimum 1 minute, maximum 180 minutes). The power light will turn red.
- 5.To use the clothes dryer without a timer, turn the dial counterclockwise to ON. The power light will turn red.
- 6. The fan will start to run, filling the airer with warm air. Moist air will escape through the vents on the top of the cover.
- 7. When the drying time has elapsed, the clothes dryer will turn off automatically. The knob turns OFF and the power light turns off. If you are using the clothes dryer without the timer, just turn the dial to the OFF position.
- 8.Switch off and unplug from the mains socket and then let everything cool down for a moment. Unzip the cover and remove

the hangers. Please be careful with the metal parts of the hangers that may be hot. CAUTION: Keep your hands away from the metal air vent as it can bevery hot.

9. Allow clothes dryer to cool completely before storing.

# **PROBLEM SOLVING**

- 1.Clothes take too long to dry.
- 2.Clothes that are too thick or heavy.
- 3. The laundry was not spun or drained well.
- 4. The cover has not been closed completely.
- 5. The dryer stops suddenly.
- 6. The drying time has elapsed
- 7.The fan is blocked, which activates the safety cut-out. Turn off and unplug the clothes dryer, and allow it to cool completely before cleaning any blockages from the ventilation slots and air intake holes on the bottom of the unit.

### **CAREAND CLEANING**

liquid.

- The clothes dryer is designed to be easily removable for compact storage after use. Always turn off, unplug and allow the dryer to cool completely before disassembling and storing. Just follow the steps for ASSEMBLING YOUR CLOTHING DRYER in reverse.
- Always turn the clothes dryer off and unplug before cleaning and make sure it is completely cool.
- Clean the parts with a damp cloth and then with a dry cloth.
- Check the ventilation slots and air intake holes at the bottom of the unit to make sure they are free of obstruction.
- The cover can be washed below 40° C and tumble dried.
   CAUTION: Never immerse the clothes dryer in water or any other

# **CORRECT DISPOSAL OF THIS PRODUCT**



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.