

 
双缘 145x210mm 20251109

HHB7001 IM 黑白


# TOASTER

## INSTRUCTION MANUAL

Model: HHB7001

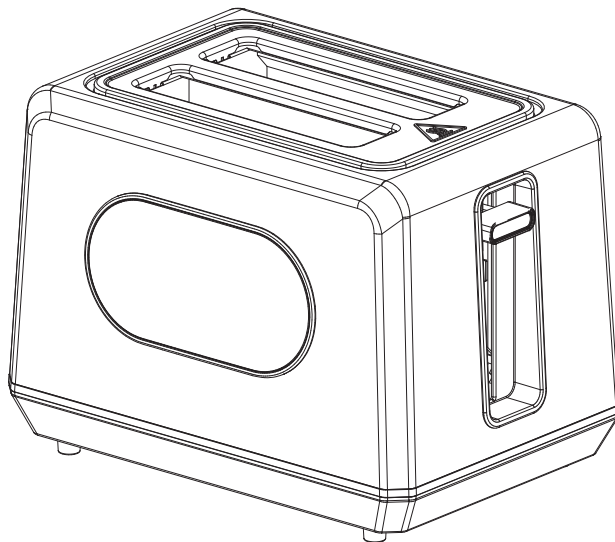

 Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.



## IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- This device is not a toy , do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil .  
**THERE IS A DANGER OF SUFFOCATION !**
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person<sup>(\*)</sup> in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- If a long extension cord is used; the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.

<sup>(\*)</sup> **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

#### **SPECIFIC SAFETY FOR THIS UNIT**

- . Do not leave the appliance unattended  
(very dry bread can sometimes begin to burn in the toaster)
- . CAUTION : metal parts become hot !
- . Never insert fork, knife or any other object in the toaster !

## BEFORE FIRST USE

 
Let the unit run without bread about 3 minutes to remove the protective layer of resistance.

For this, select the longest time. The light emission of smoke and smell is normal.

## USE


- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped & if there are visible signs of damage or if it is leaking.
- Never modify the appliance in anyway.
- Do not use or keep this product outside when it is raining.
- Certain parts of the appliance can get hot. Do not touch them, as you may burn yourself.

## TO KNOW IT'S UNIT

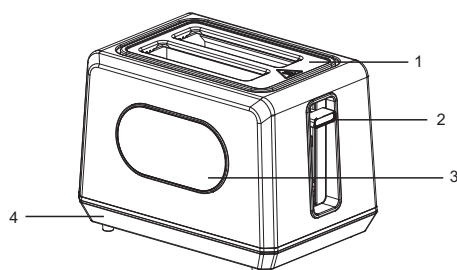

1. Large slots (2 slots, Length: 13.5 cm, width: 3.5 cm)
2. Bread carriage handle
3. Display screen
4. Crumb tray (under the unit)

## HHB7001 Circuit Board Function (Icon) Introduction

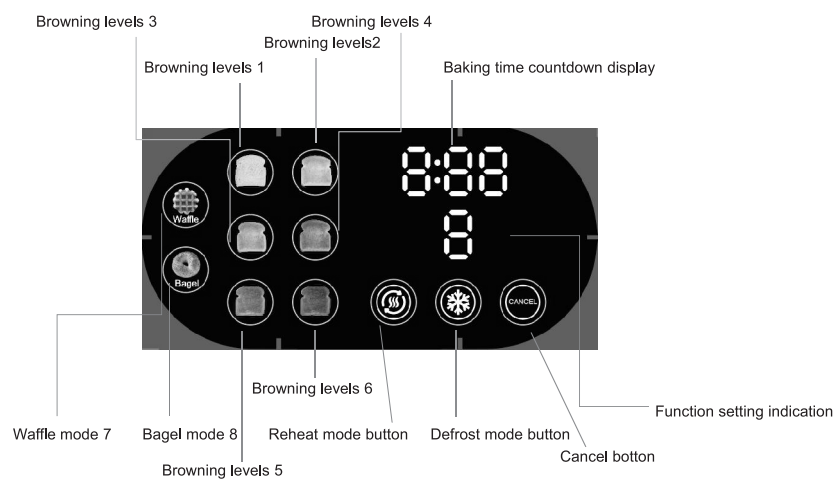 

### Basic Operations

1. When powered on, the screen is black. Put food into the toaster slot and press the switch to turn on the circuit.
2. The screen lights up fully, and the buzzer beeps twice (chord sound). It defaults to Browning level 3, shows the related baking countdown, and the Browning level 3 Mode flashes.
3. 3 seconds before baking ends, the buzzer beeps three times (alarm), the screen turns black, and the food pops out.

### Browning levels Selection

1. Support 1-6 browning levels adjustments for browning. Press the browning icons on the left to switch level.  
After switching levels, the screen updates the related baking countdown at the same time. In normal baking mode, the level number changes together.

### Special Baking Modes

#### 1. Waffle Mode

Put waffles in and press the switch, then quickly press the Waffle icon. This icon and browning levels icon flash together. They indicate 7, but you can adjust the browning levels. The screen shows the related countdown.

#### 2. Bagel Mode

Put bagels in and press the switch, then quickly press the Bagel icon. This icon and the browning levels icon flash together. They indicate 8, but you can adjust the browning levels. The screen shows the related countdown.

### **Auxiliary Modes**

#### **1. Reheat Mode**

Press the Reheat icon: the buzzer beeps once (prompt), and this icon flashes. The screen shows a fixed 30-second countdown, and only the Cancel key works.

#### **2. Defrost Mode**

Put frozen food in and press the switch, then quickly press the Defrost icon: the buzzer beeps once (prompt). The browning level 3 icon and Defrost icon flash together. It defaults to level 3. All levels baking time is extended by 15 seconds. You can switch browning levels and Waffle Mode, and Bagel Mode.

### **Cancel (Stop) Key Function**

After the baking cycle ends, the toaster lifts the bread automatically. If you need to stop baking before the cycle ends, just press the "Cancel" key on the panel.

## **MAINTENANCE AND CLEANING**

- Before attempting any cleaning operation, make sure the toaster is unplugged from the supply socket and fully cooled down.
- To remove bread crumbs slide the crumb tray situated on the side of the appliance.
- Never use sharp objects to clean. Doing so could damage the appliance.
- To clean the exterior surfaces, simply wipe over with a soft damp cloth.
- All other maintenance and repair should be performed by a qualified technician.

## **STORAGE**

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

### **NOTICE ABOUT RECYCLING**



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Name: Toaster  
Model: HHB7001  
Voltage: 220-240V~ 50/60Hz 780-930W  
Capacity: 2slice

