# A5大小

## **SLIVERS CRIEST**

INSTRUCTION BOOKLET
БУКЛЕТ-ИНСТРУКЦИЯ

2 Slice Toaster
Тостер на 2 ломтика

## A5大小

#### IMPORTANT INSTRUCTIONS

- 1. Please read this instruction manual carefully.
- 2. Firstly, use the toaster for few minutes without bread. Smokes may come out. It is normal.
- 3. Do not immerse any part of this appliance in water to prevent electrical shock.
- 4. Supervise children when using use this appliance.
- 5. Do not leave the appliance unattended when in use
- 6. Always use the appliance on dry and flat surface.
- 7. Do not use this appliance outdoors.
- 8. Always unplug from the socket when not in use.
- Do not operate the appliance if it does not work properly. Please return the appliance to an authorized service centre for repair.
- 10. Do not let the cord to hang over the edge of a table.
- 11. Do not touch the hot surface of this appliance.
- 12. Do not place this appliance on or near hot gas, oven, or microwave oven.
- 13. Do not cover the toaster when being used.
- 14. Provide adequate air ventilation when using the appliance. Keep flammable materials such as curtains, clothings, towels away from the appliance.
- 15. Do not use harsh abrasive cleaners to clean this appliance.
- 16. Do not put bread with jam into the toaster.
- 17. Do not use the toaster without crumb tray. It should be cleaned regularly to prevent from overheating.
- 18. This appliance is for household use only. Do not use the appliance for any other use.
- 19. Children being supervised not to play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The instructions shall state that the appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliances is intended to be used in household and similar applications such as:-staff kitchen areas in shops, offices and others working environments; -farm house; -by clients in hotels, motels and other residential

type environments; -bed and breakfast type.

#### **HOW TO USE**

- Plug the toaster into the power supply outlet.
- 2. Put two slices of bread into bread slots.
- Rotate the "Browning Control Knob" to your preferred level.

### 4. Then press "Start" button to toast.

- WARNING

  1. If the bread got stuck in the toaster, unplug it immediately.
- Then clean the toaster after it cools down.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction
- concerning use of the appliance by a person responsible for their safety.

  4. Children should be supervised to ensure that they do not play with the
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

### CLEANING AND MAINTENANCE

- 1. Unplug the appliance after use or before cleaning.
- Let the appliance to cool down and clean the appliance with damp cloth or soft dry cloth. Do not immerse any part of the appliance in water!
- To clean the internal part, turn the toaster upside down and shake. Bread crumbs will drop out.
- 4. To remove bread crumbs, please unscrew the door at the bottom of the toaster.

T

