INSTRUCTION MANUAL



SL-206B

When using electrical appliances. Basic safety precautions should always be followed, including the following.

General safety instructions

- Before commissioning this device please read the instruction manual carefully.
- Please keep these instructions, the guaranty certificate, the sales receipt and, if possible, the carton with the inner packaging!
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities of lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are old than 8 and supervised.
- Keep the appliance and its cord out of reach children less than 8years.
- The device is intended exclusively for private and not for commercial use!
- Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device before. Pull on the plug, not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
- Do not repair the device yourself, but take this to nearest authorized service station.
- Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and such

like.

- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
- Do not use the device outdoors.
- Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water.
- Use the device only for the intended purpose.

Special safety notes

- The baking surfaces get very hot. Touch the handles only.
- Put the unit down onto a heat-resistant surface or mat.
- In order to prevent heat from building up, do not put the unit directly underneath a cupboard. Ensure that there is enough space all around.
- Beware of steam coming out when you open the baking section.
- The steak can burn, so never use the toaster near or below curtains and other inflammable materials!
- A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.
- If the supply cord is damaged. it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not immerse the appliance in any liquid.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Charcoal or similar combustible fuels must not be used with this appliance.


WARING: Always use mittens to protect hands when opening a hot cooking plate, escaping steam heat may cause burning.

SAVE THESE INSTRUTIONS

Consumer safety information

ELECTRICAL CORD: A short power-supply cord is provided to reduce the hazards of Becoming entangled in, or tripping over a longer cord. Using an extension cord is not recommended. If an extension cord is used it must be a UL listed cord of an equal or greater rating than the rating of the appliance. Care must be taken to arrange the extension cord so it will not drape over countertop or tabletop where it can be pulled on by children or tripped over. If the appliance is of the grounded type, the extension cord should be of the same type. Do not leave this appliance unattended while in use.

Parts

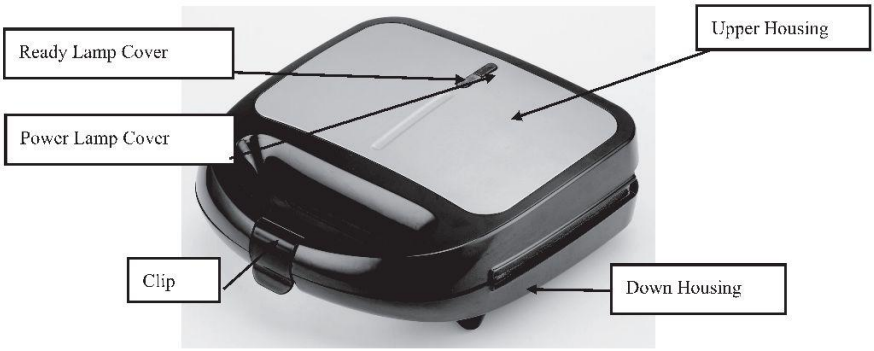

Before Using Your Appliance

- Cooking plates should be washed in warm soapy water, rinsed and dried thoroughly before using. You may also wash them in your dishwasher if you like, all cooking plate are totally dishwasher safe.
- To remove of change cooking plates, place unit in the flat open position. Press the plate release button. This will release the plate for removal. Life the plate up and out.

CAUTION: Never place appliance housing or cord in water or any other liquid. To reduce the risk of fire or electrical shock, never operate unit unless cooking plates are securely snapped in place.

How to use your sandwich maker inserting cooking plates

1) Make sure your sandwich maker is unplugged when inserting or removing desired cooking plates.
2) To remove plates currently in your unit, just press the cooking plate release button and remove current cooking plate. To insert desired cooking plates, insert tabs on cooking plate into slots on unit near the hinge area.
3) Push down and snap the other side of the cooking plate into place.

COOKING ON YOUR SANDWICH MAKER

1) Make sure your sandwich maker is unplugged. Select desired cooking plates. (see above for inserting and removing cooking plates).
2) Let preheat until the indicator light goes out, about five minutes.
3) Now you are ready to use your 3 in 1 as a waffle baker, sandwich maker, grill or griddle, etc. You can lightly oil your cooking plates before using.

4) When cooking is completed, unplug and let the unit cool down before removing or cleaning cooking plates.

Cleaning your 3 in 1 Family Fun Machine

WARING: To reduce the risk of burn to hands and fingers, always allow the unit to cool down before removing cooking plates.

1) Make sure until is unplugged and has cooled down.
2) Press release button to remove cooking plates. Wash plates in warm soapy water, and dry. You may also place them in your dishwasher if you like.
3) If grease has dripped into the area under the cooking plates, clean with a damp cloth, and dry. Never use abrasive pads or cleaners on cooking plates or any other part of your 3 in 1 Family Fun Machine.

Warranty information

The manufacturer provides warranty in accordance with the legislation of the customer's own county of residence, with a minimum of 1 year. Starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. when making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

----Normal wear and tear.

----Incorrect use, e.g. overloading of the appliance, use of non-approved accessories.

----Use of force, damage caused by external influences.

----Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.

----Partially or completely dismantled appliances.

English:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.